



TROUBLESHOOTING

THE STARTER MOTOR DOES NOT OPERATE.

Procedure

Check:

- | | |
|---|---|
| <ol style="list-style-type: none"> 1. Fuse (main) 2. Battery 3. Starter motor 4. Starting circuit cut-off relay 5. Starter relay 6. Main switch | <ol style="list-style-type: none"> 7. Engine stop switch 8. Gear position switch 9. Rear brake switch 10. Start switch 11. Wiring connection
(the entire electric starting system) |
|---|---|

NOTE:

- Remove the following parts before troubleshooting.
 - 1) Seat
 - 2) Front carrier
 - 3) Front fender
- Use the following special tool for troubleshooting.



Pocket tester:
P/N. YU-03112, 90890-03112

