



7.Engine stop switch

- Disconnect the handlebar switch (left) coupler from the wireharness.
- Check for continuity as follows:
Black/White ① – Black ②

	B/W	B
OFF	<input type="radio"/>	<input type="radio"/>
ON	<input type="checkbox"/>	<input type="checkbox"/>

INCORRECT

Replace the handlebar switch (left).



8.Gear position switch

- Disconnect the gear position switch coupler from the wireharness.
- Check for continuity as follows:
Brown ① – frame ground

	Br	G	-
Neutral	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
In gear	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Reverse	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

INCORRECT

Replace the gear position switch.

